

Manual to install the firmware

For DIS-2650AP Rev.A

Recommendation:


Connect the DIS-2650AP and the PC, with it you make the firmware upgrade, with a LAN cable with your network, there is also the DHCP server available.

For the installation of the firmware please follow this.

1. Get access to the setup of your DAP via web browser.
The default address is <http://192.168.0.50> or when you already implemented the DAP into your network please call the IP-address this you configured into you DAP or this the DAP got from the DHCP server in your network.



2. If the DIS-2650AP isn't already configured then at **System Country** choose any country and click on **Update**.

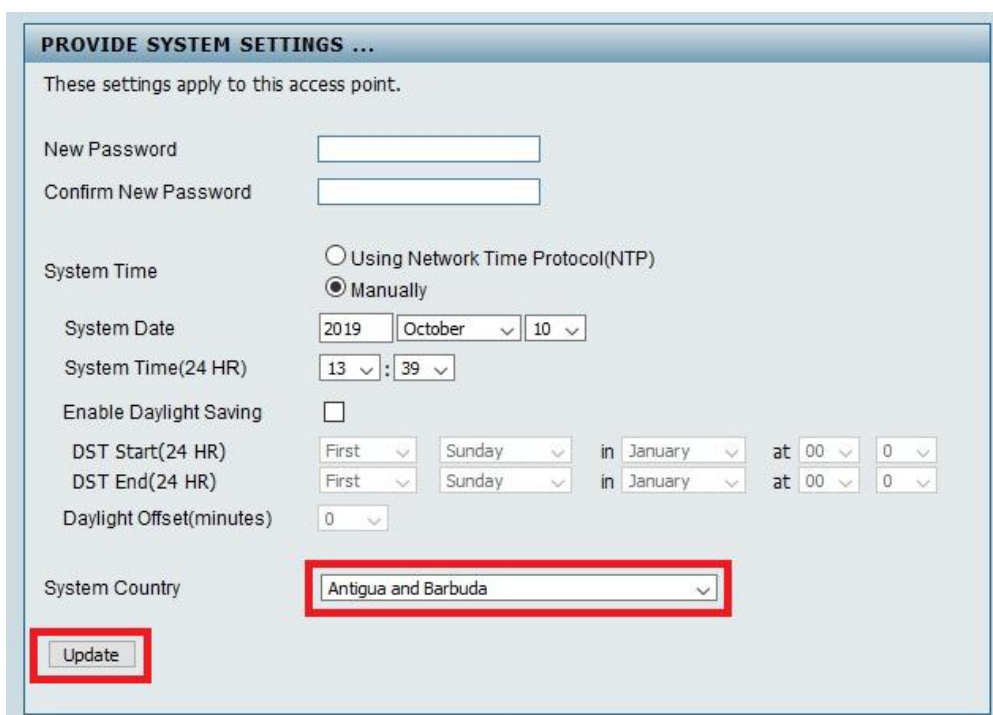
A screenshot of a web-based configuration interface titled 'PROVIDE SYSTEM SETTINGS ...'. The interface contains several form fields and controls. At the top, it says 'These settings apply to this access point.' Below this are fields for 'New Password' and 'Confirm New Password'. The 'System Time' section has two radio buttons: 'Using Network Time Protocol(NTP)' and 'Manually' (which is selected). Below these are dropdowns for 'System Date' (2019, October, 10) and 'System Time(24 HR)' (13:39). There is a checkbox for 'Enable Daylight Saving' which is unchecked. Below that are fields for 'DST Start(24 HR)' and 'DST End(24 HR)', each with dropdowns for 'First', 'Sunday', 'in', 'January', 'at', '00', and '0'. A 'Daylight Offset(minutes)' field is set to '0'. At the bottom, the 'System Country' dropdown is set to 'Antigua and Barbuda' and is highlighted with a red rectangle. Below this, the 'Update' button is also highlighted with a red rectangle.

3. Please wait 2 minutes.



4. By default the setup has the password **admin**.

At **User Name** and **Password** enter **admin** and then click on **Login**.

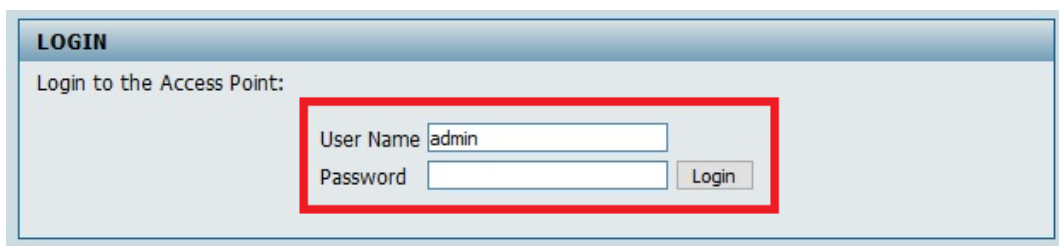


Note:

Did you set an Admin-Password please enter this.

Do you don't know the Admin-Password anymore you must reset the DIS-2650AP to factory defaults (Factory Reset).

For this press the Reset button of the running DIS-2650AP for example with a paperclip or pencil for 5-10 seconds.

- At the top choose the menu **Maintenance** and then in the open menu **Firmware and SSL Certification Upload**.

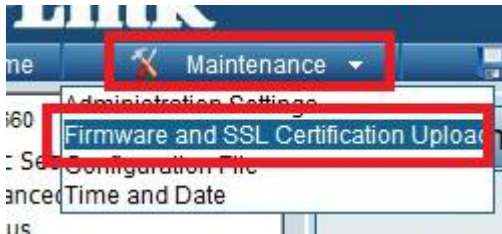

- At **Upload Firmware From File** click on **Choose File**.

Pick the previously un-zipped firmware file
DIS-2650AP_RevA_Firmware_110b03r011.bin
 and click on **Upload**.



- The firmware will be installed now.

This takes close to 5 minutes.



8. Important:

Reset the DIS-2650AP to factory defaults (Factory Reset).

For this press the Reset button of the running DIS-2650AP for example with a paperclip or pencil for 5-10 seconds.

Else the DIS-2650AP can not be bound into a Nuclias Connect environment.

If the DIS-2650AP already is running in a Nuclias Connect environment or running as a standalone access point then you don't need to make the factory reset.

To check the detailed version number of the installed version please log-in into the setup of your DIS-2650AP.

In the address line of your web browser enter

<http://<ip-adresse>/version.txt>

The **<ip-adresse>** is for the IP-address of your DIS-2650AP.

A page with detailed information about the firmware appears.